


UH 8 Wiring Diagram - Heat Pump

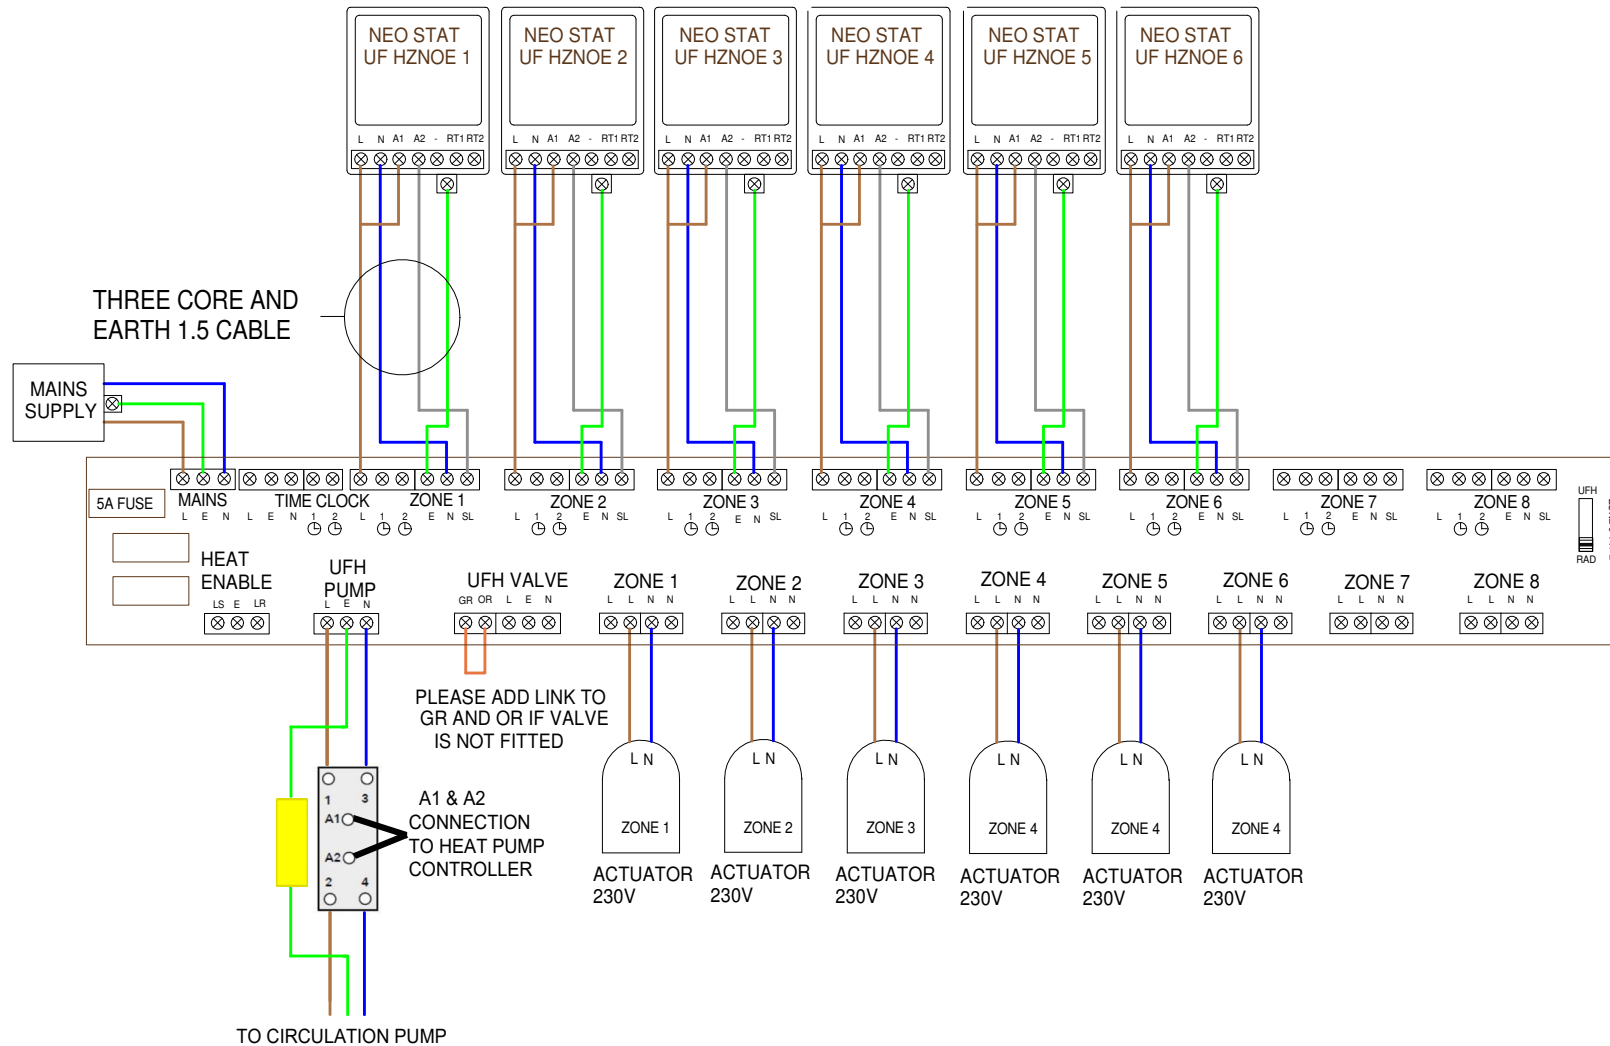

UFM UNDER FLOOR MANIFOLD

LIVE

SWITCH LIVE

NEUTRAL

EARTH

END SWITCH AND

BOILER ENABLE

This Equipment should be installed by an appropriately qualified/ registered electrician.
Fully read the instructions for proper wiring before applying power.
The warranty does not cover damage from improper wiring or installation.

